

OPTIONAL TOP RIGGING

*Minimum horizontal top rigging angle is 45° on all fixed and adjustable spreaders. M&W recommends a minimum horizontal top rigging angle of 60°. Adjustable on 1" increments.

Working Load Limit in Pounds*	Part Name	Part Number	Part Number	Part Number	Part Number
4,000	Adjustable Spreader	12805	12822	12813	12829
	Chain	23354	23355	23356	23357
	Wire Rope	23396	23397	23398	23399
	Round Sling Bridle	23374	23375	23376	23377
10,000	Adjustable Spreader	12834	12842	12848	12853
	Chain	23378	23379	23380	23381
	Wire Rope	23400	23401	23402	23403
	Round Sling Bridle	23382	23383	23384	23385
20,000	Adjustable Spreader	12864	12872	12880	12885
	Chain	23386	23387	23388	23389
	Wire Rope	23404	23405	23406	23407
	Round Sling Bridle	23390	23391	23392	23393